




通用型滑动门 安装说明


Sliding Door Installation




工具 TOOLINGS

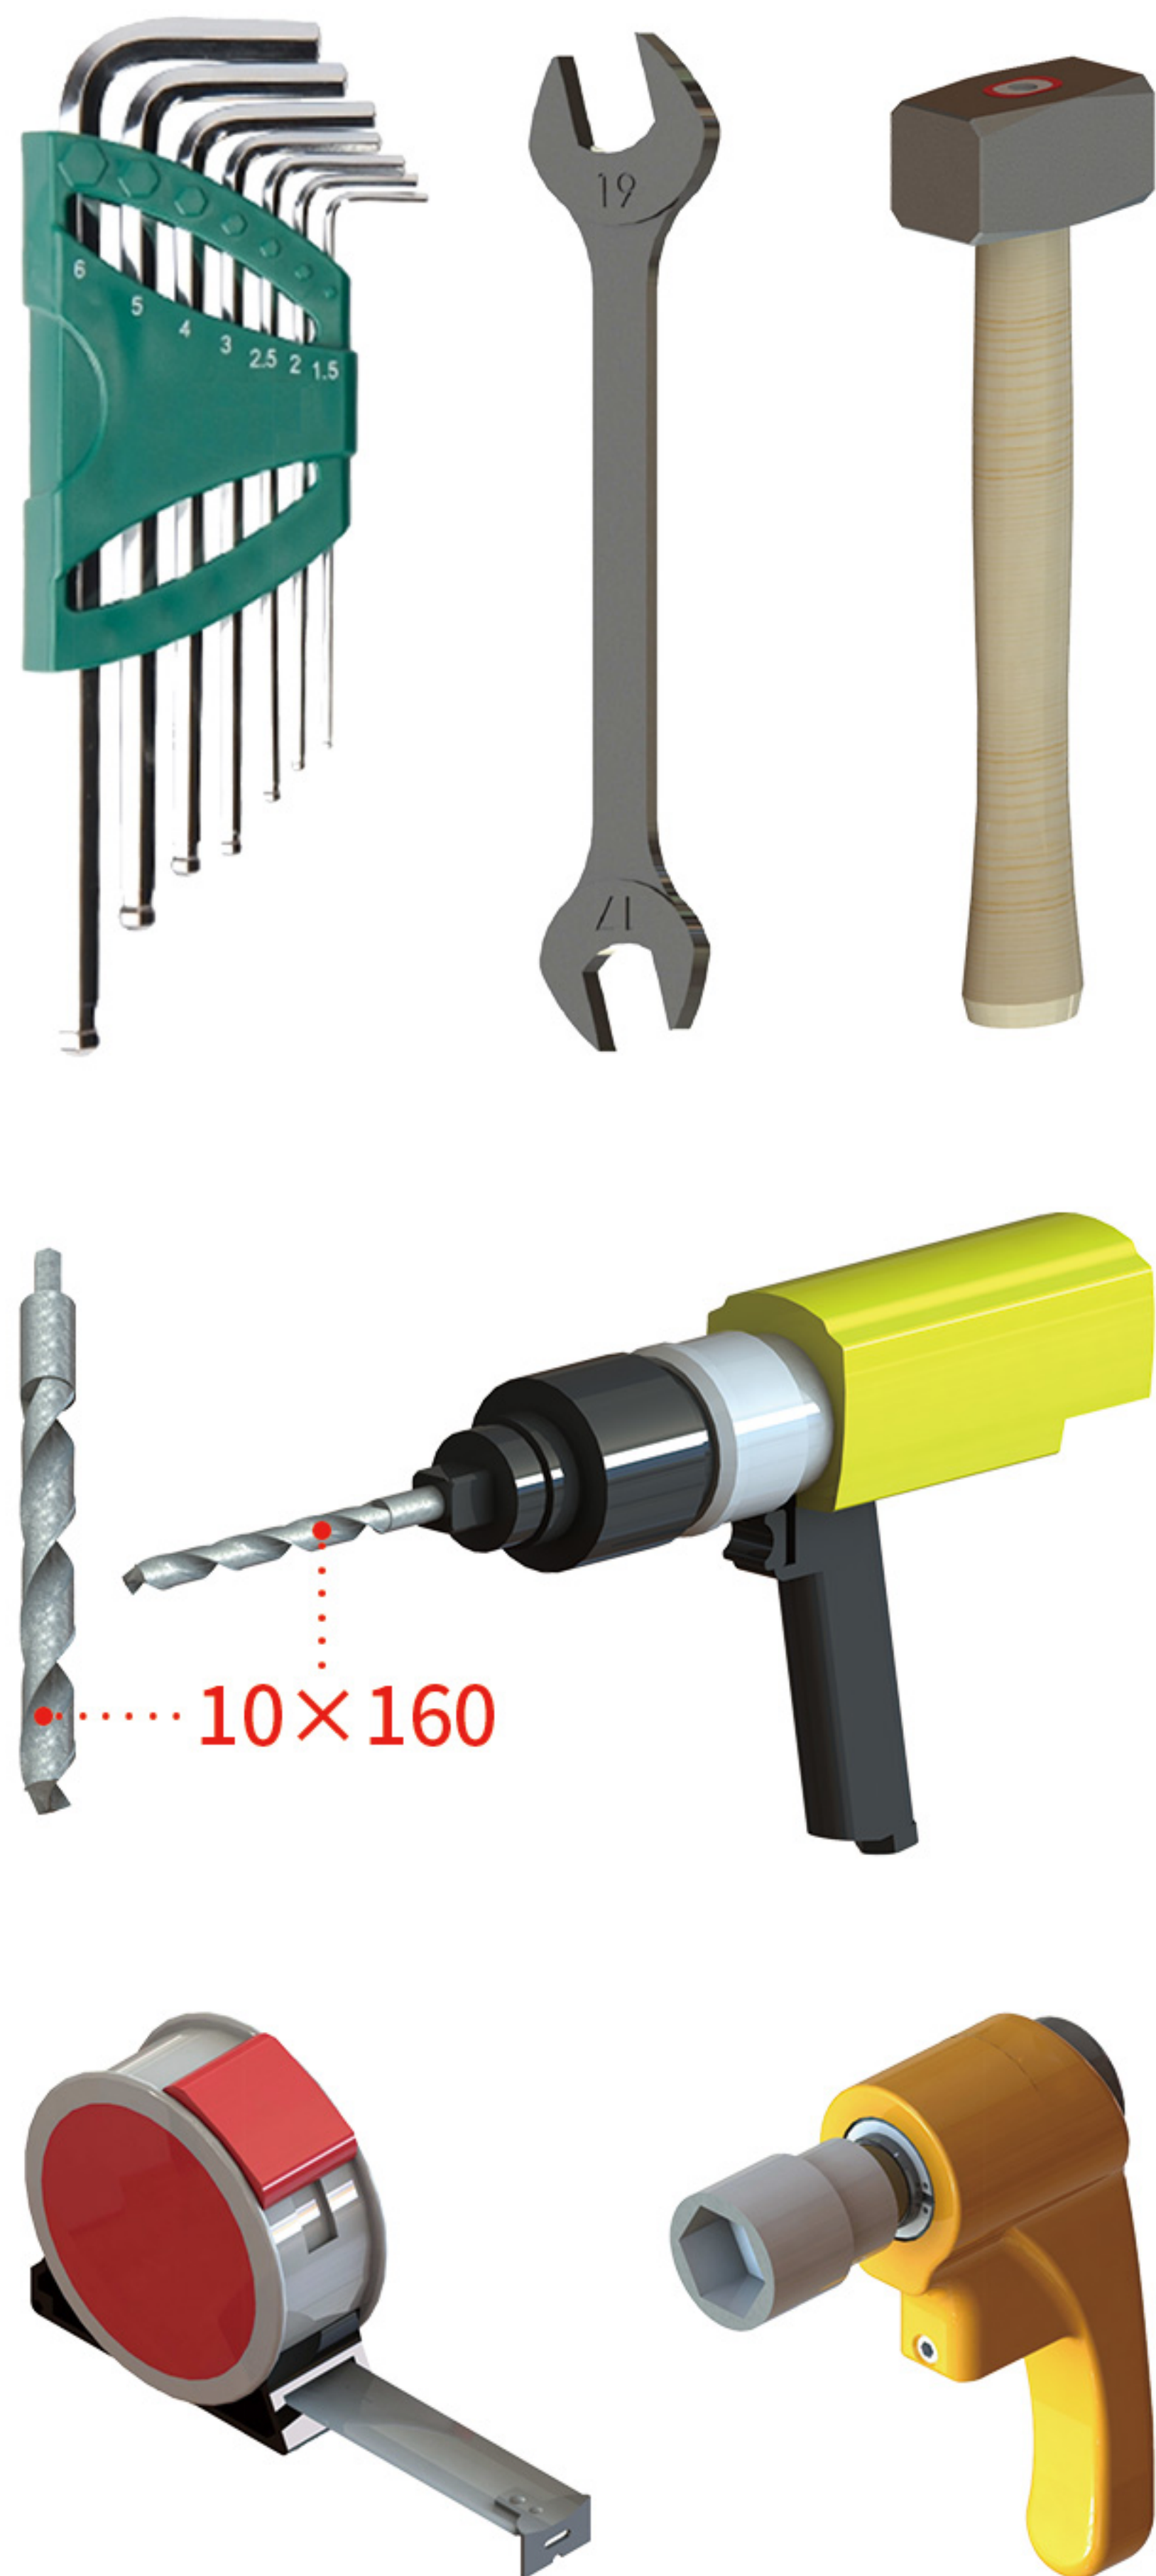

位置视图 POSITION VIEW

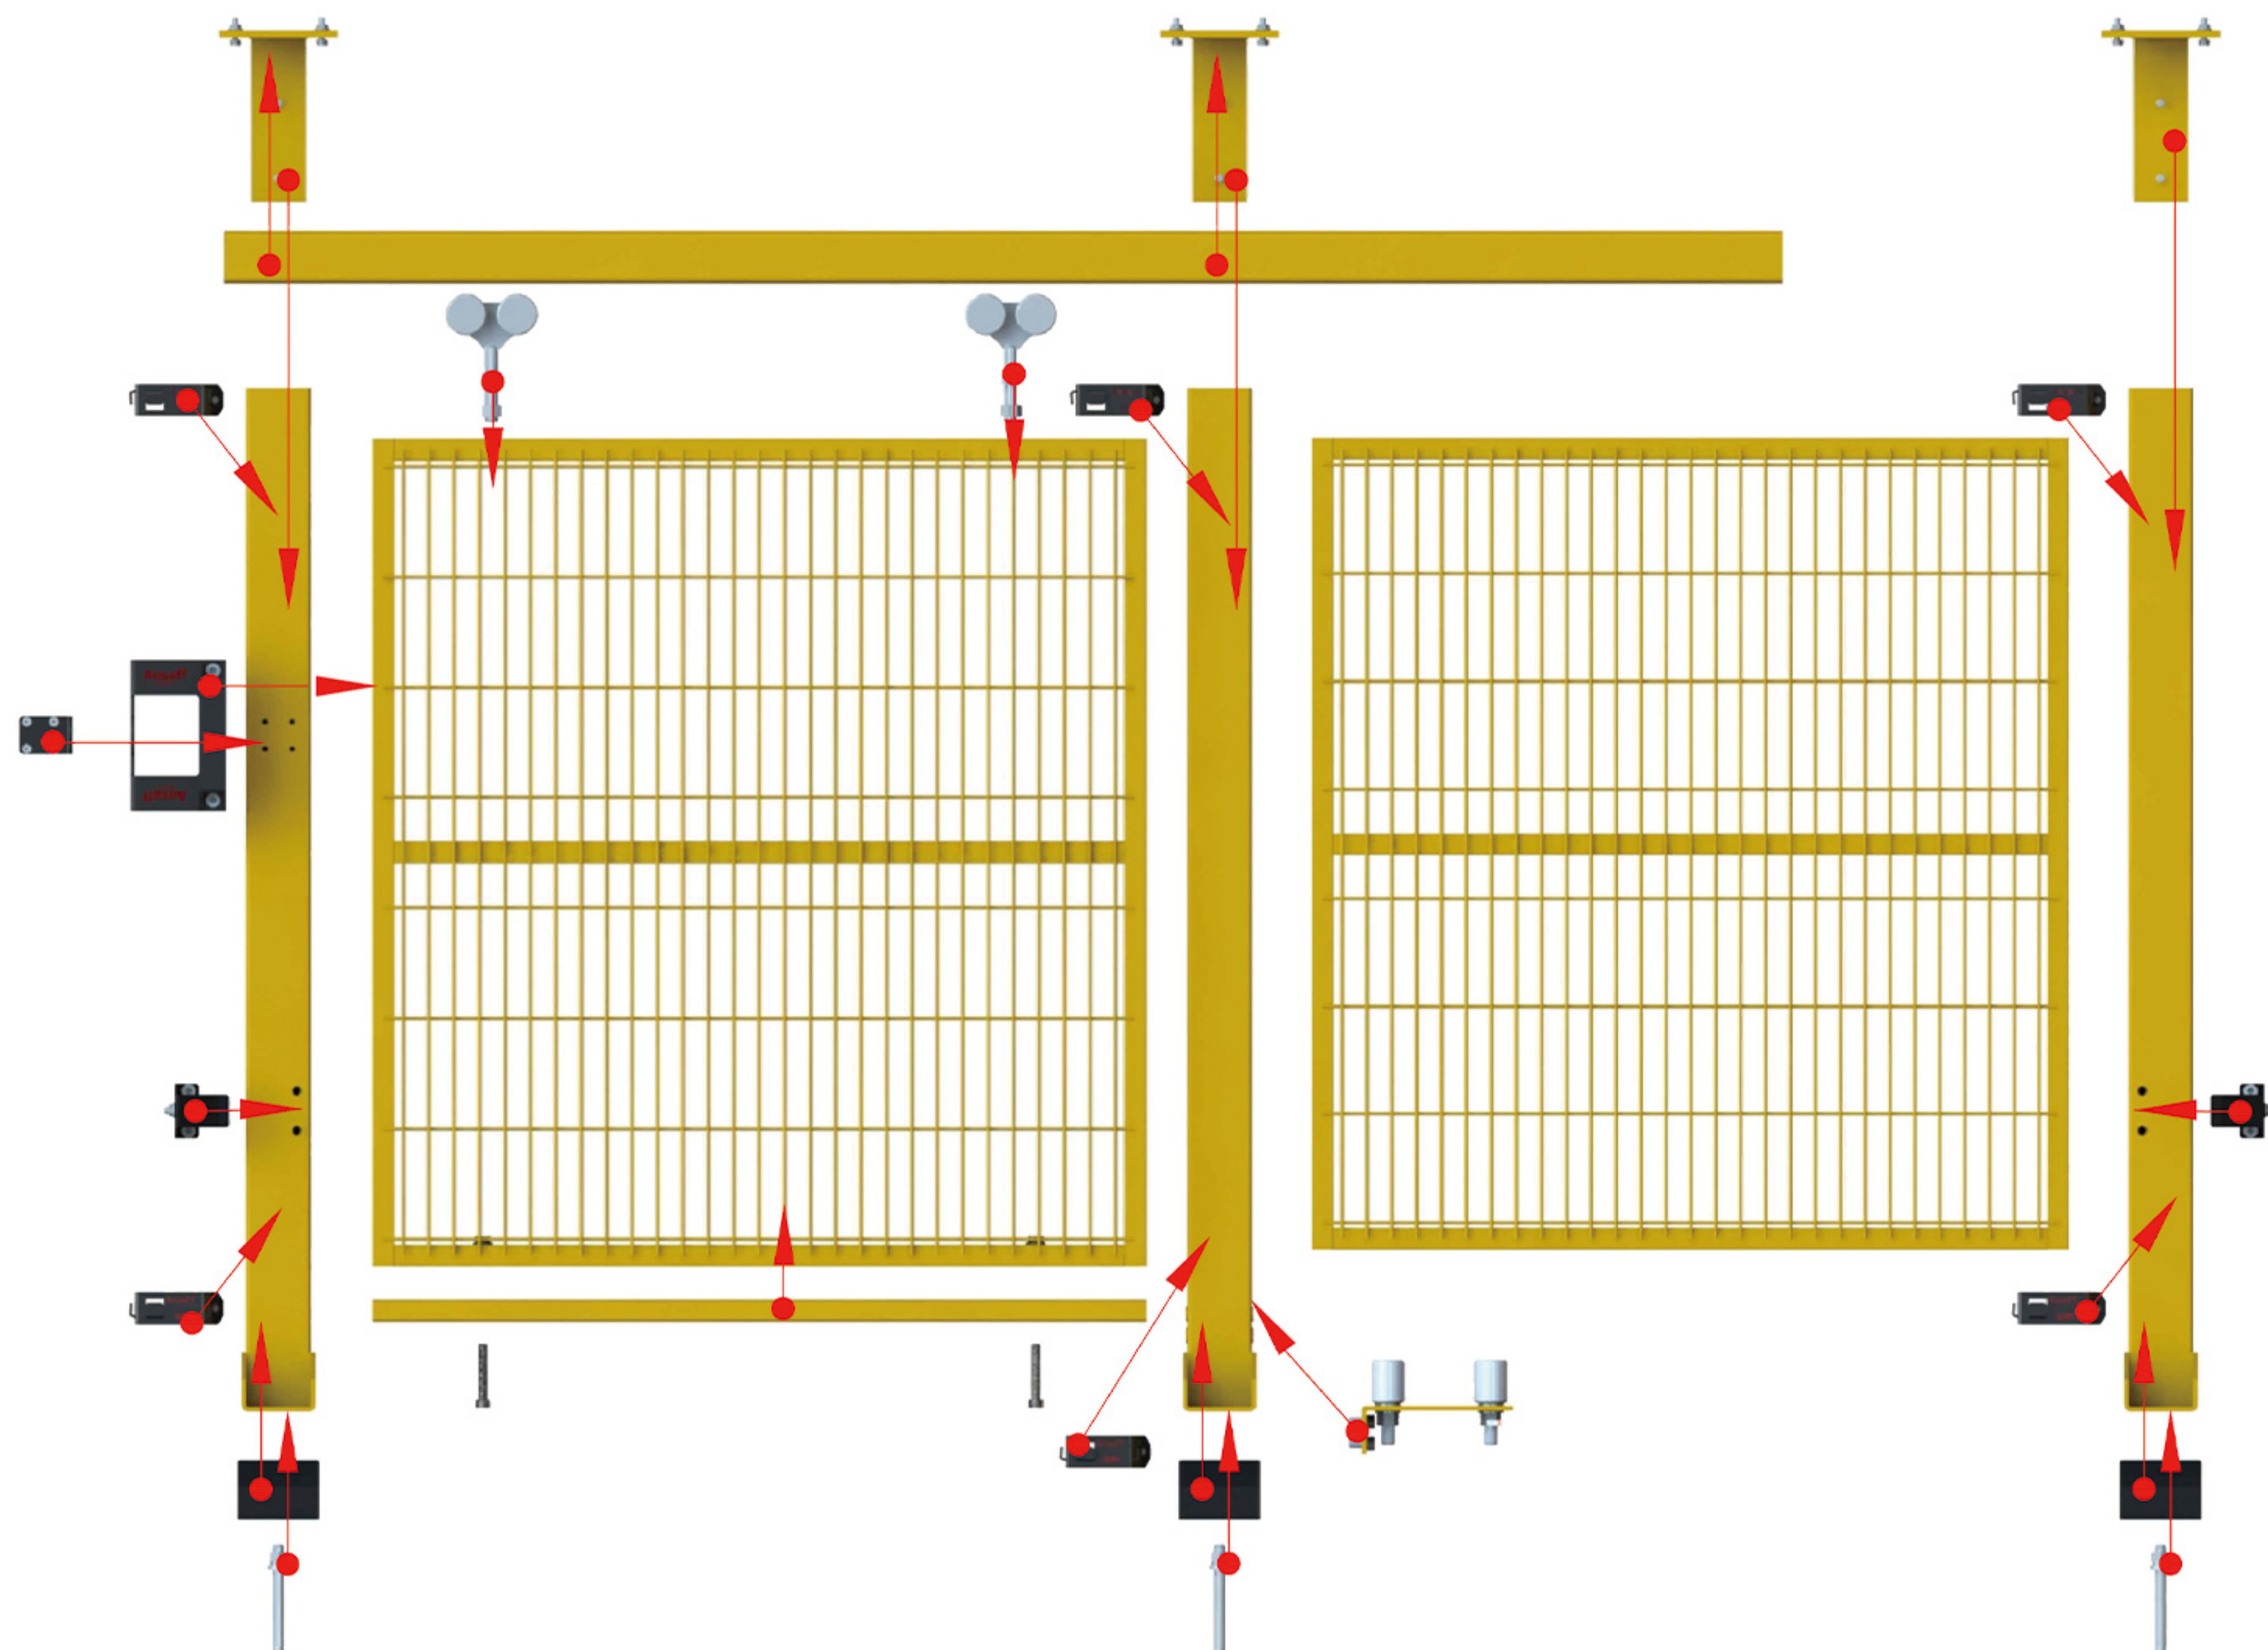

零部件 COMPONENTS & PARTS

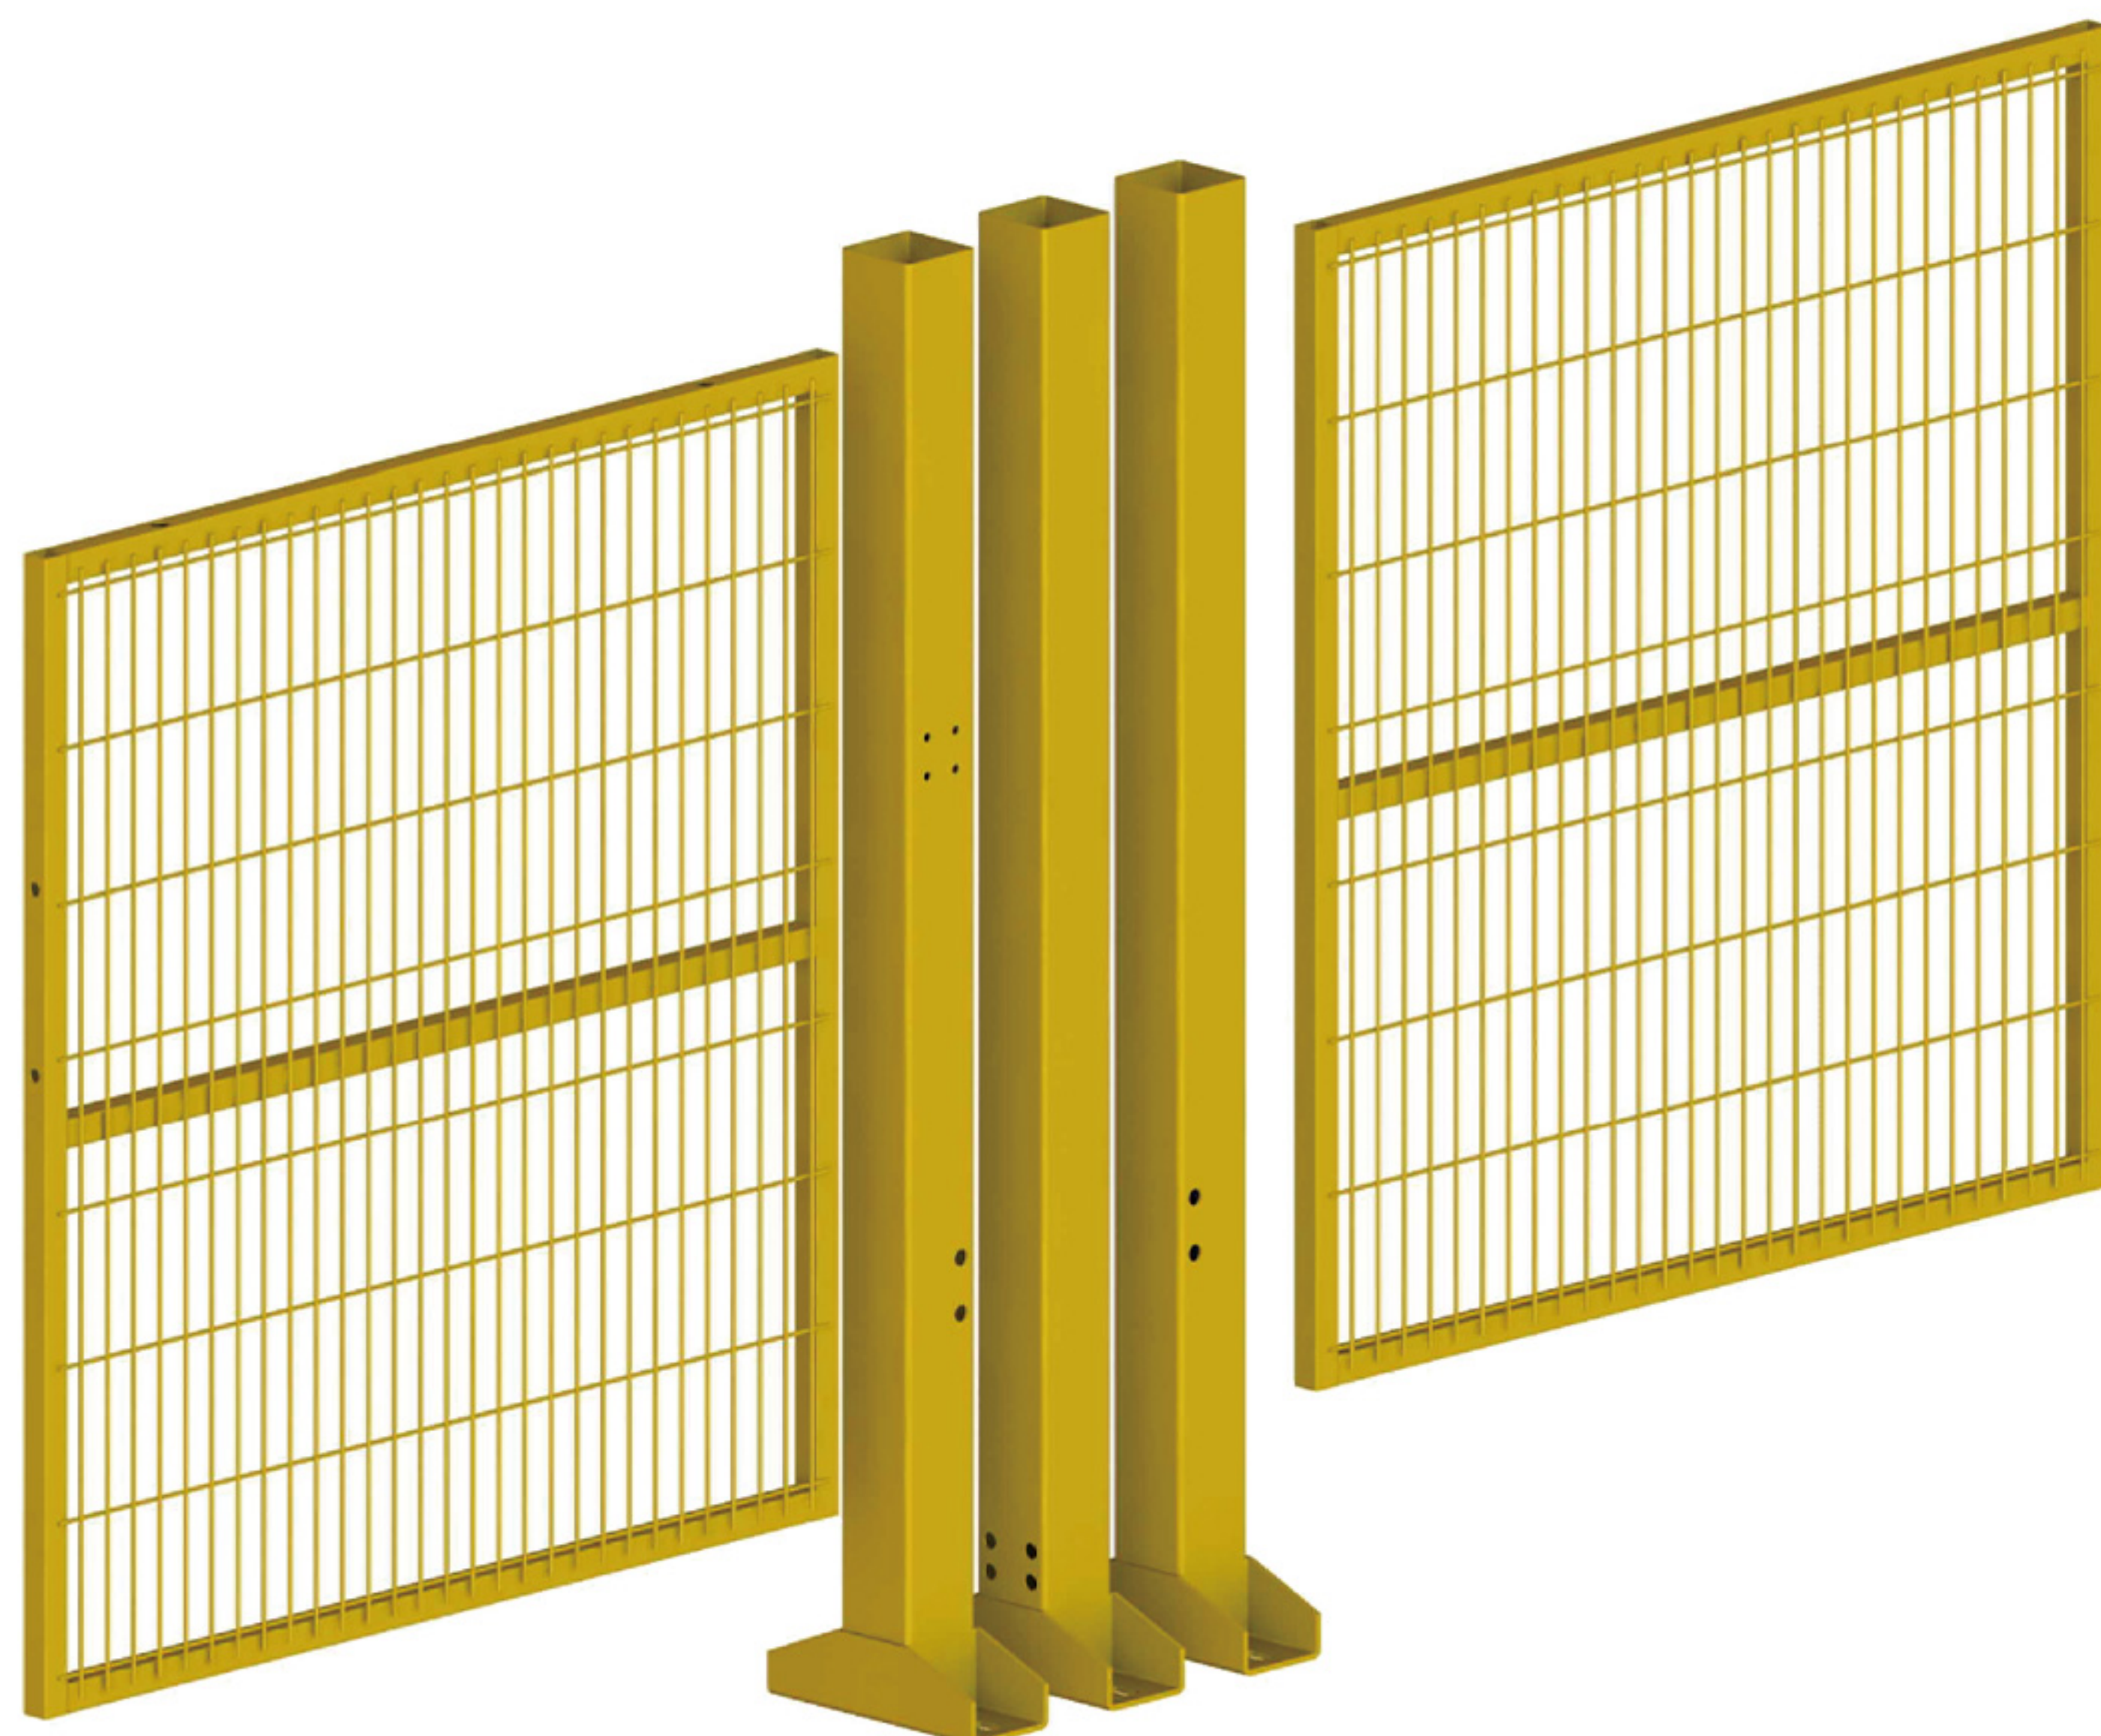

立柱和网片
Column & panel



20*20方管
20*20 square tube



安装工装
Tooling



膨胀螺栓×6
Expansion bolt




尼龙轮×4
Nylon wheel



滑动门上滑轨
Slide rail




螺钉 Mounting screws

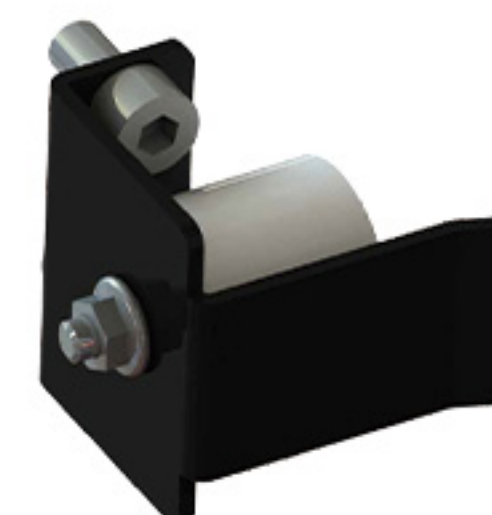

缓冲块组件
Buffer block component



上滑轮×2
Pulley

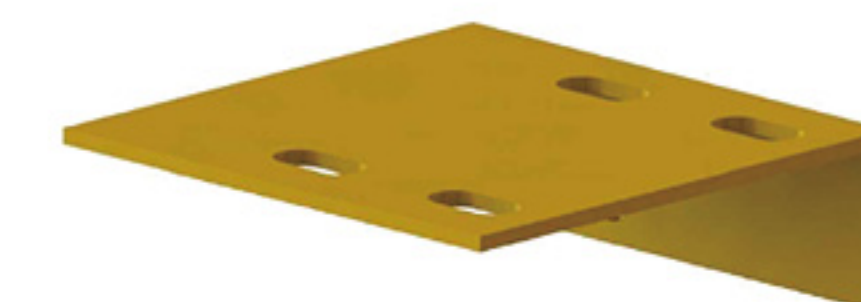


下导轮支架
Lower wheel support



挂锁板 Padlock plate



上卡环 (带logo) ×3
Upper snap ring with logo

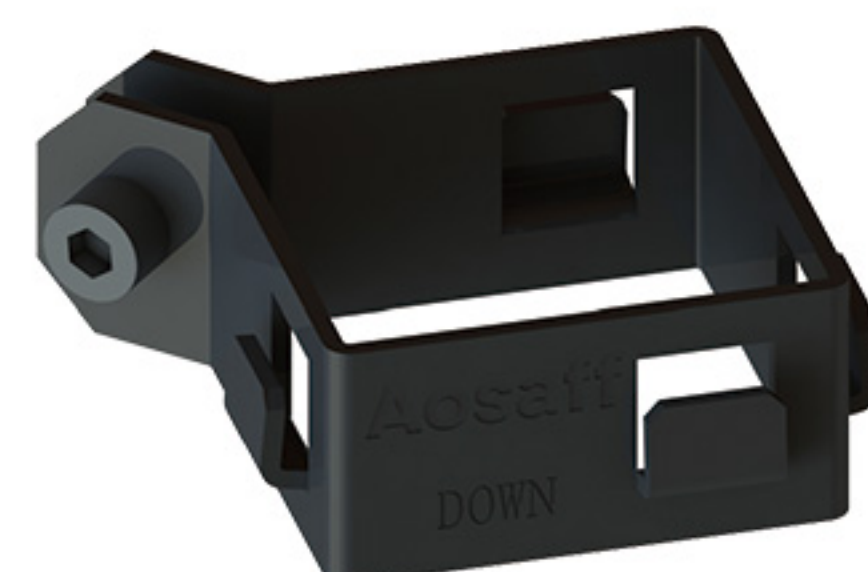

下卡环 (带logo) ×3
Lower snap ring with logo



把手组件
Handle component




L型吊架板×3
L-type hanger plate




防尘盖 Dust cover ×3


安装步骤 INSTALLATION STEPS

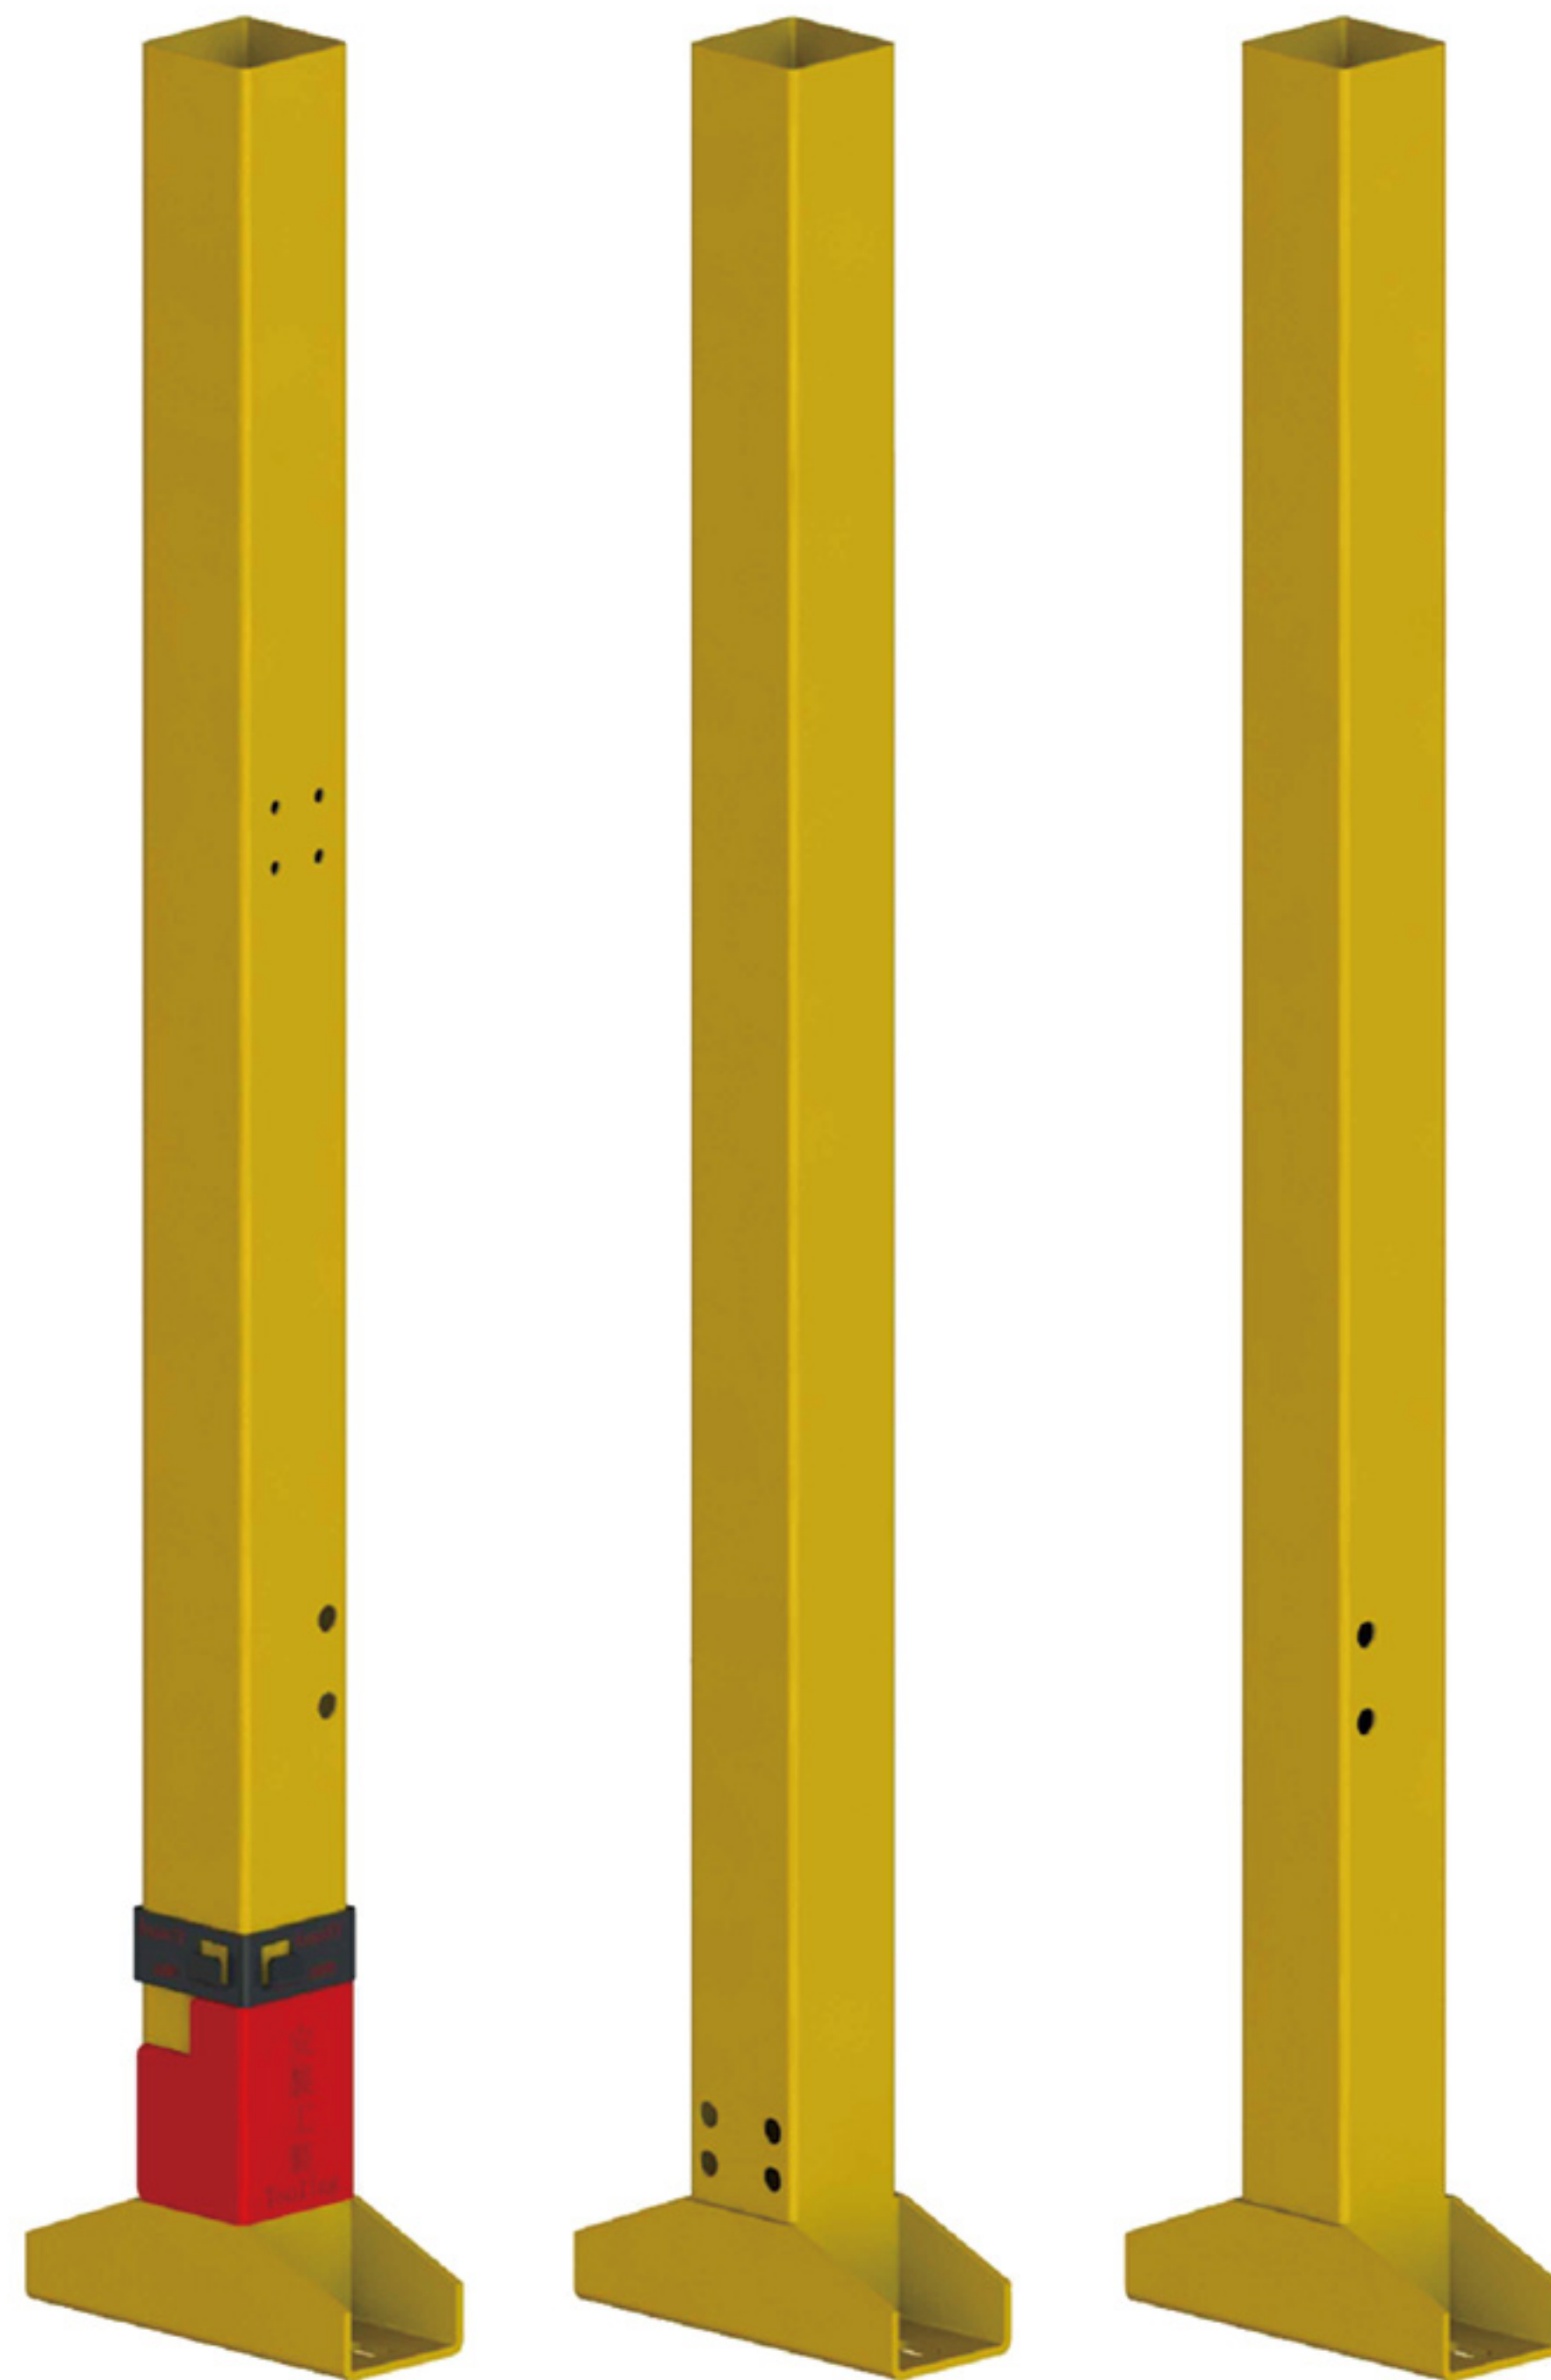

①

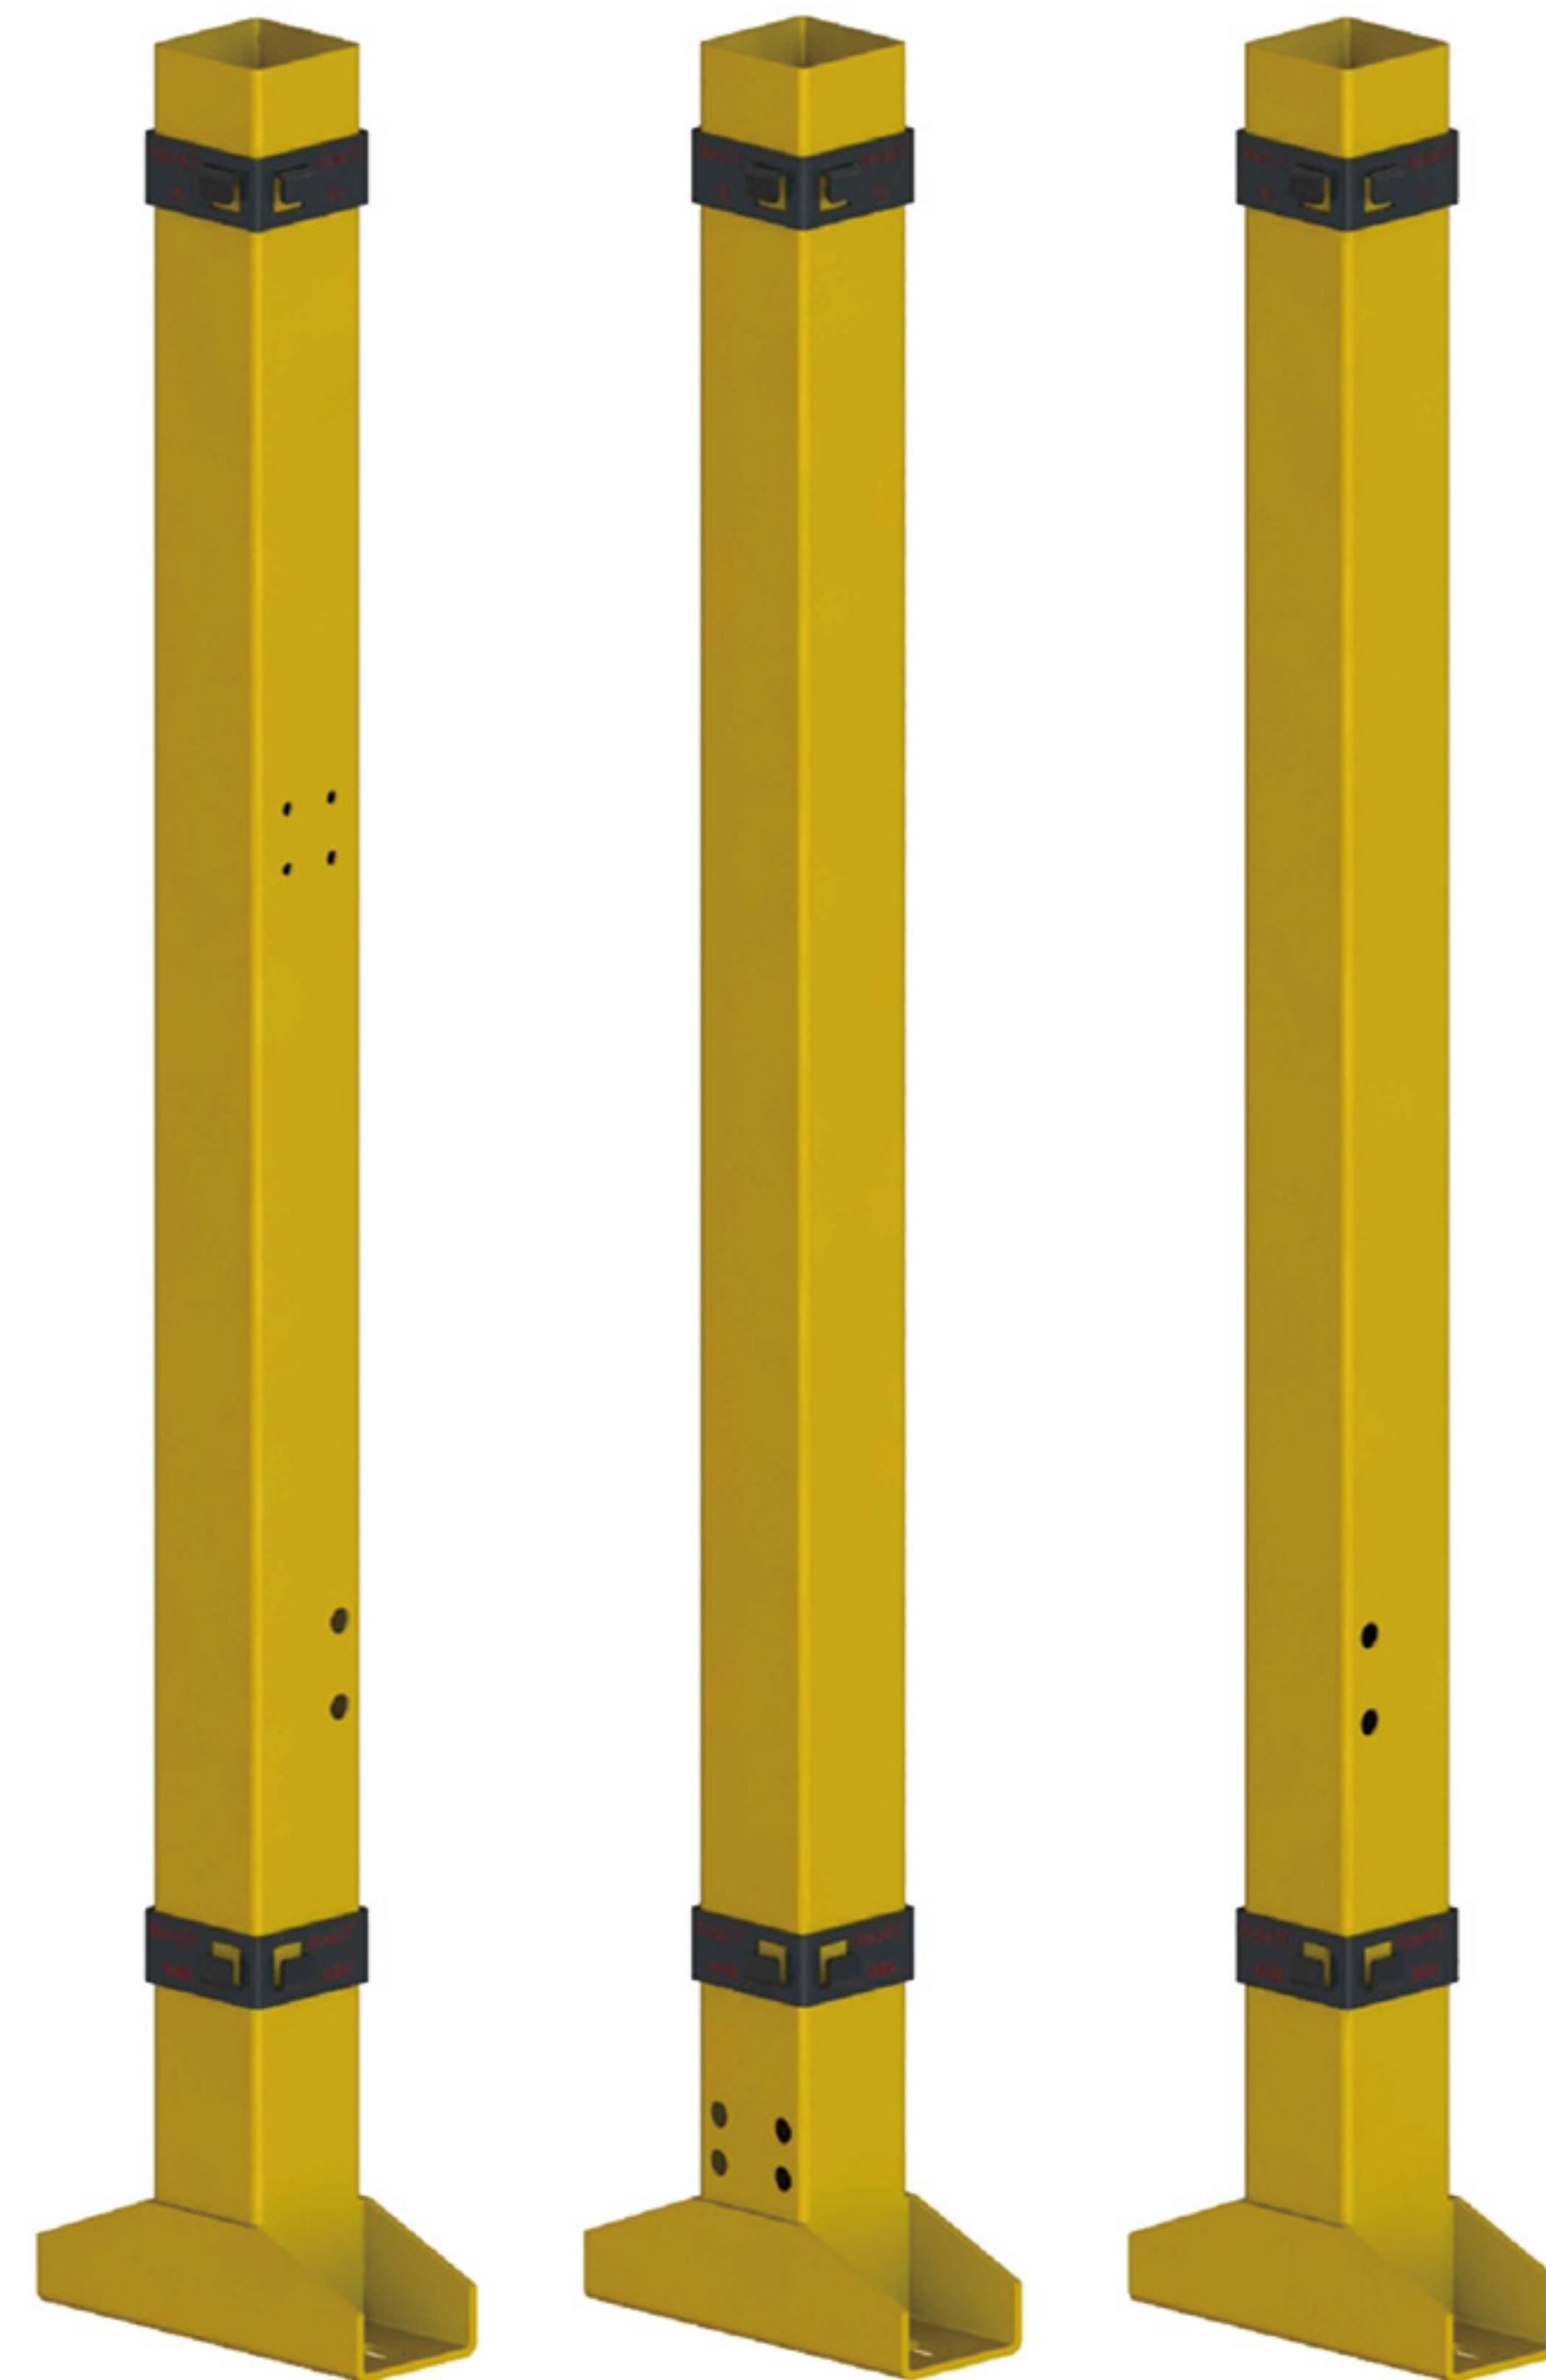


②

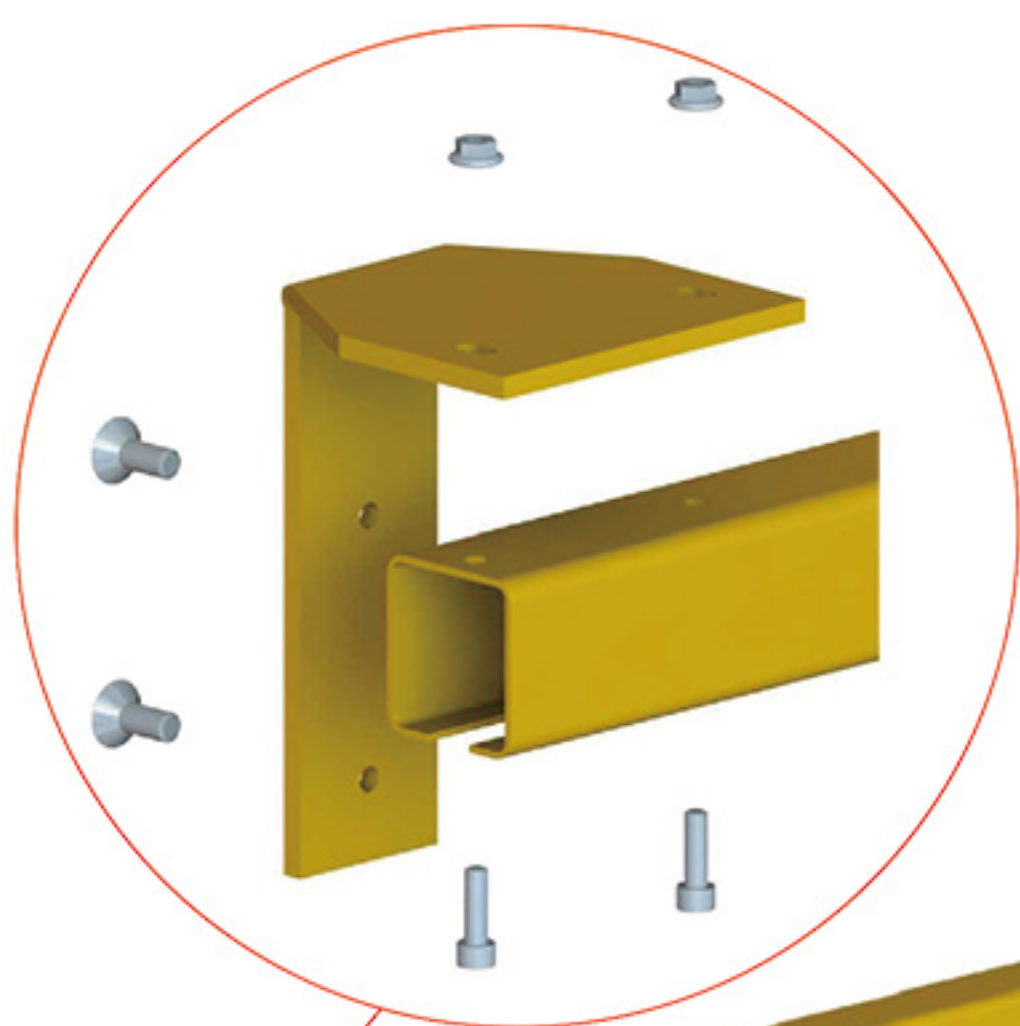


③



④

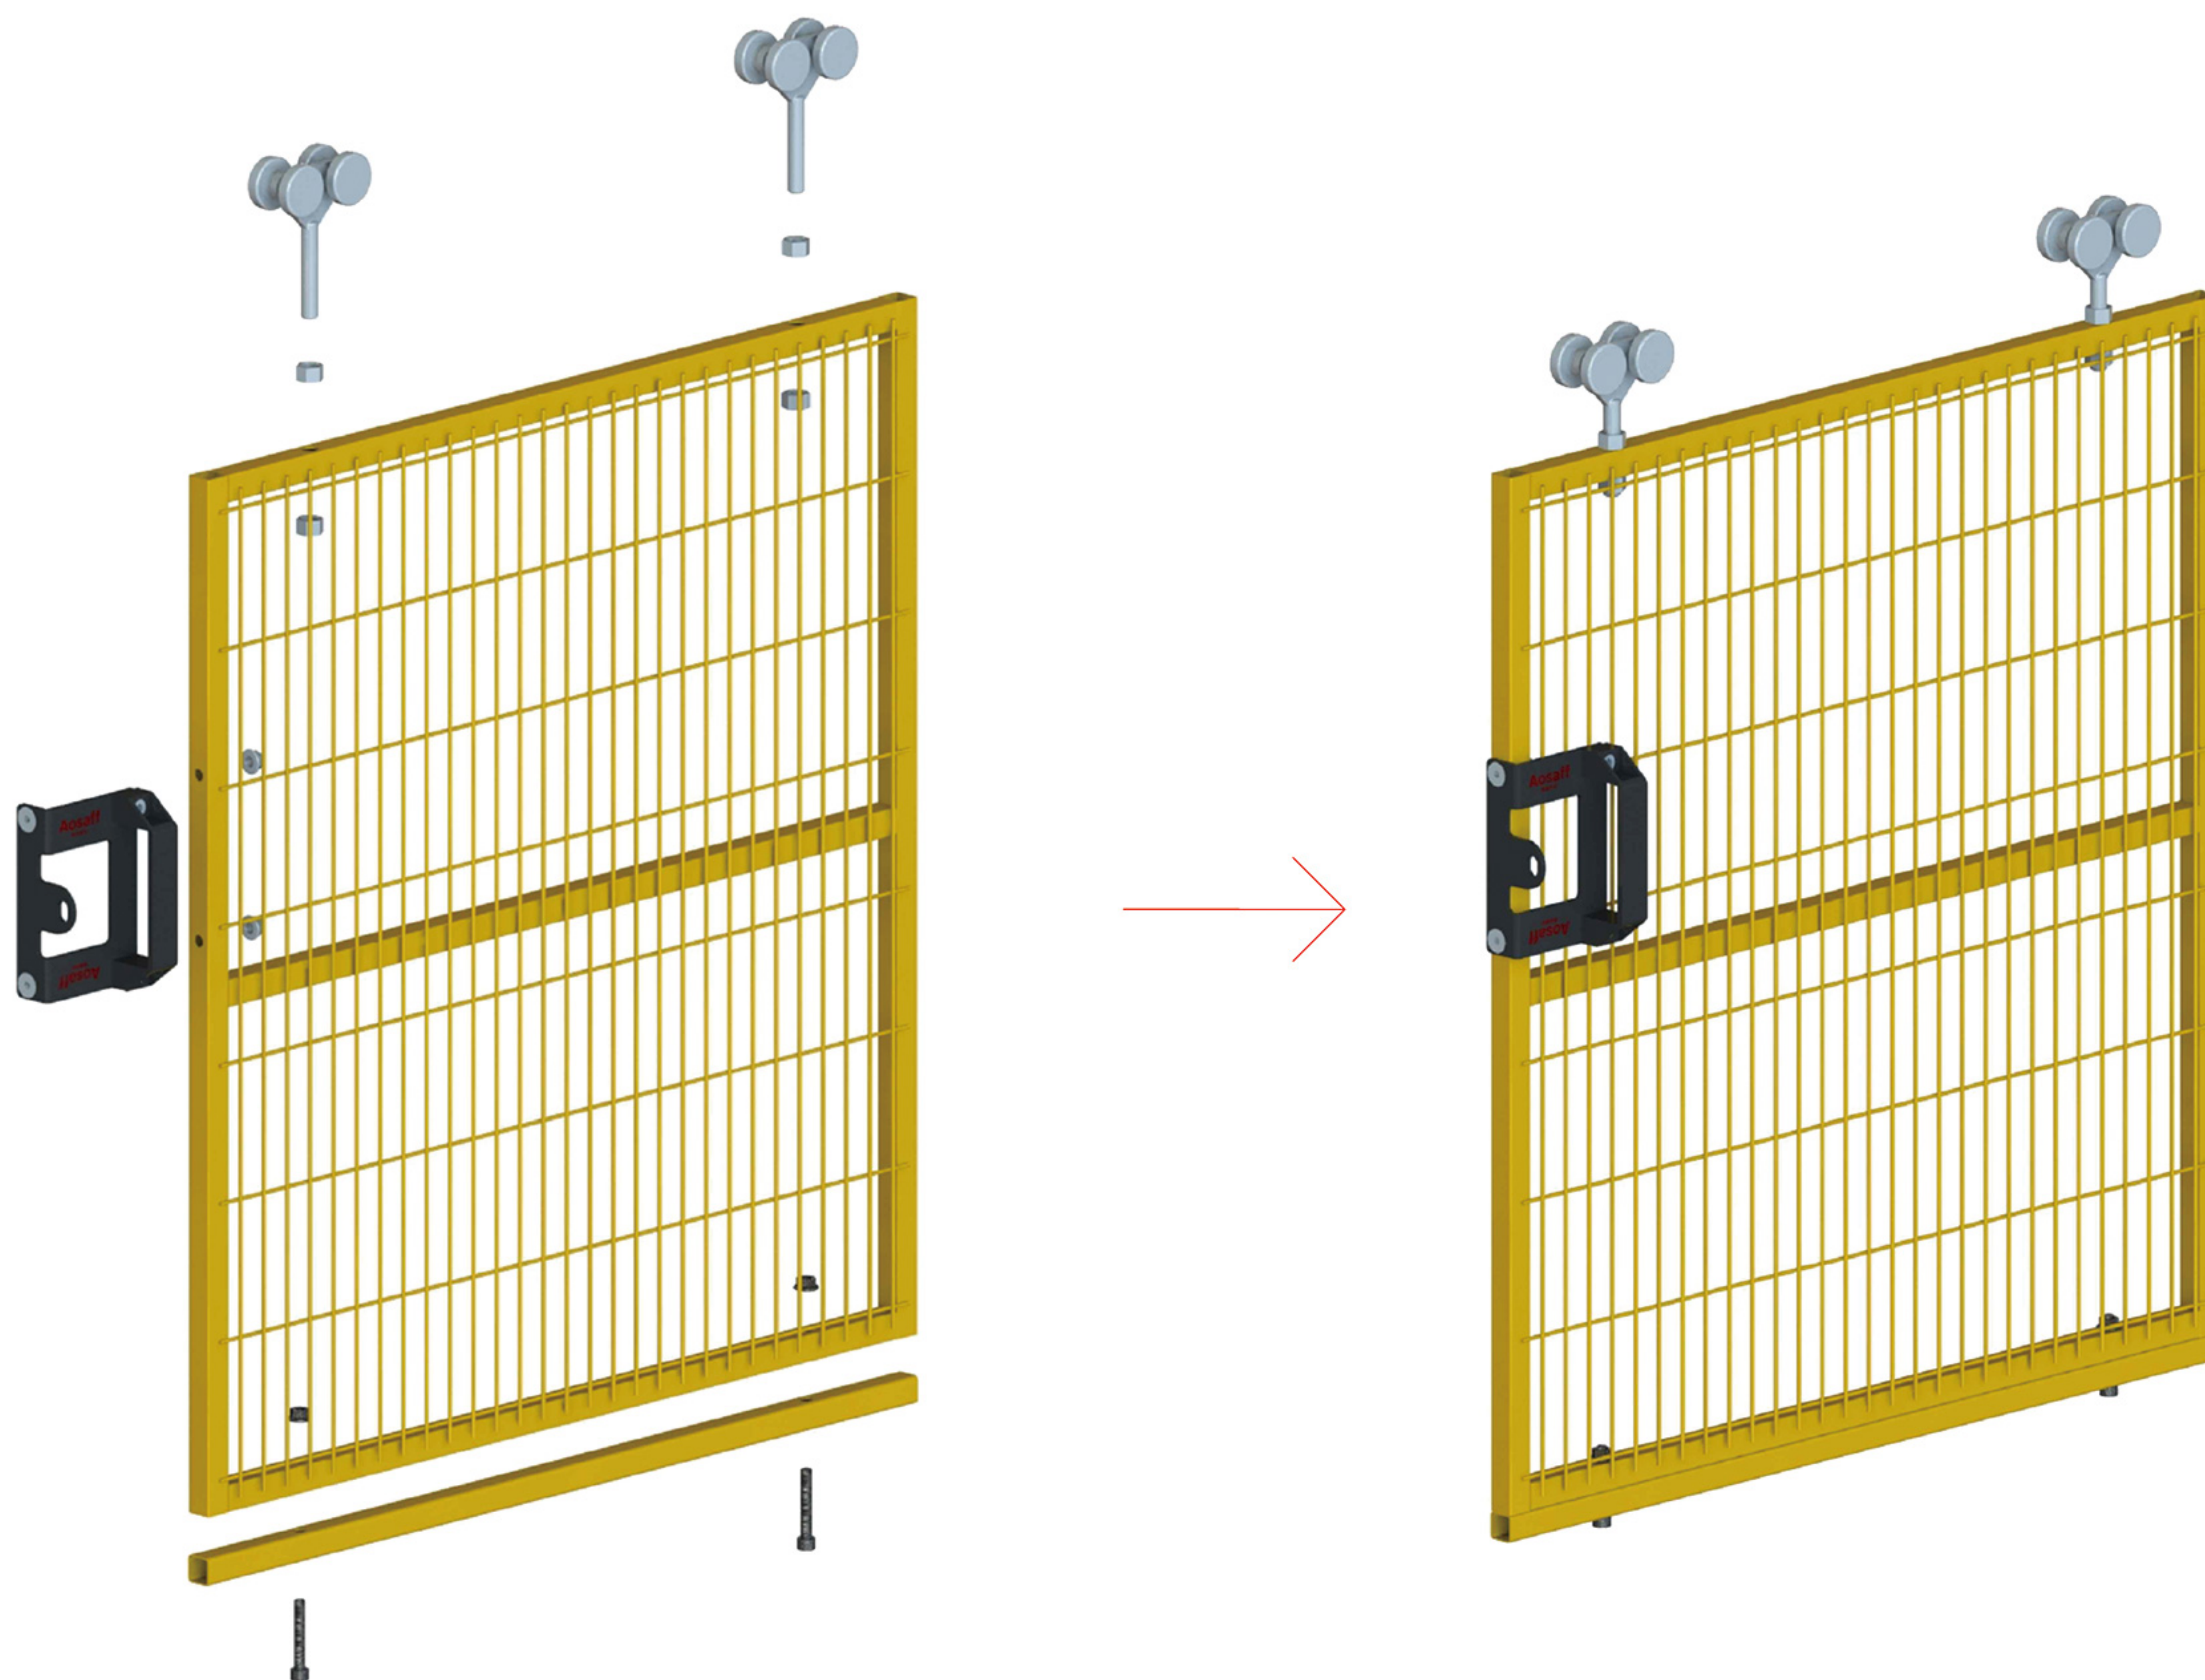

⑤

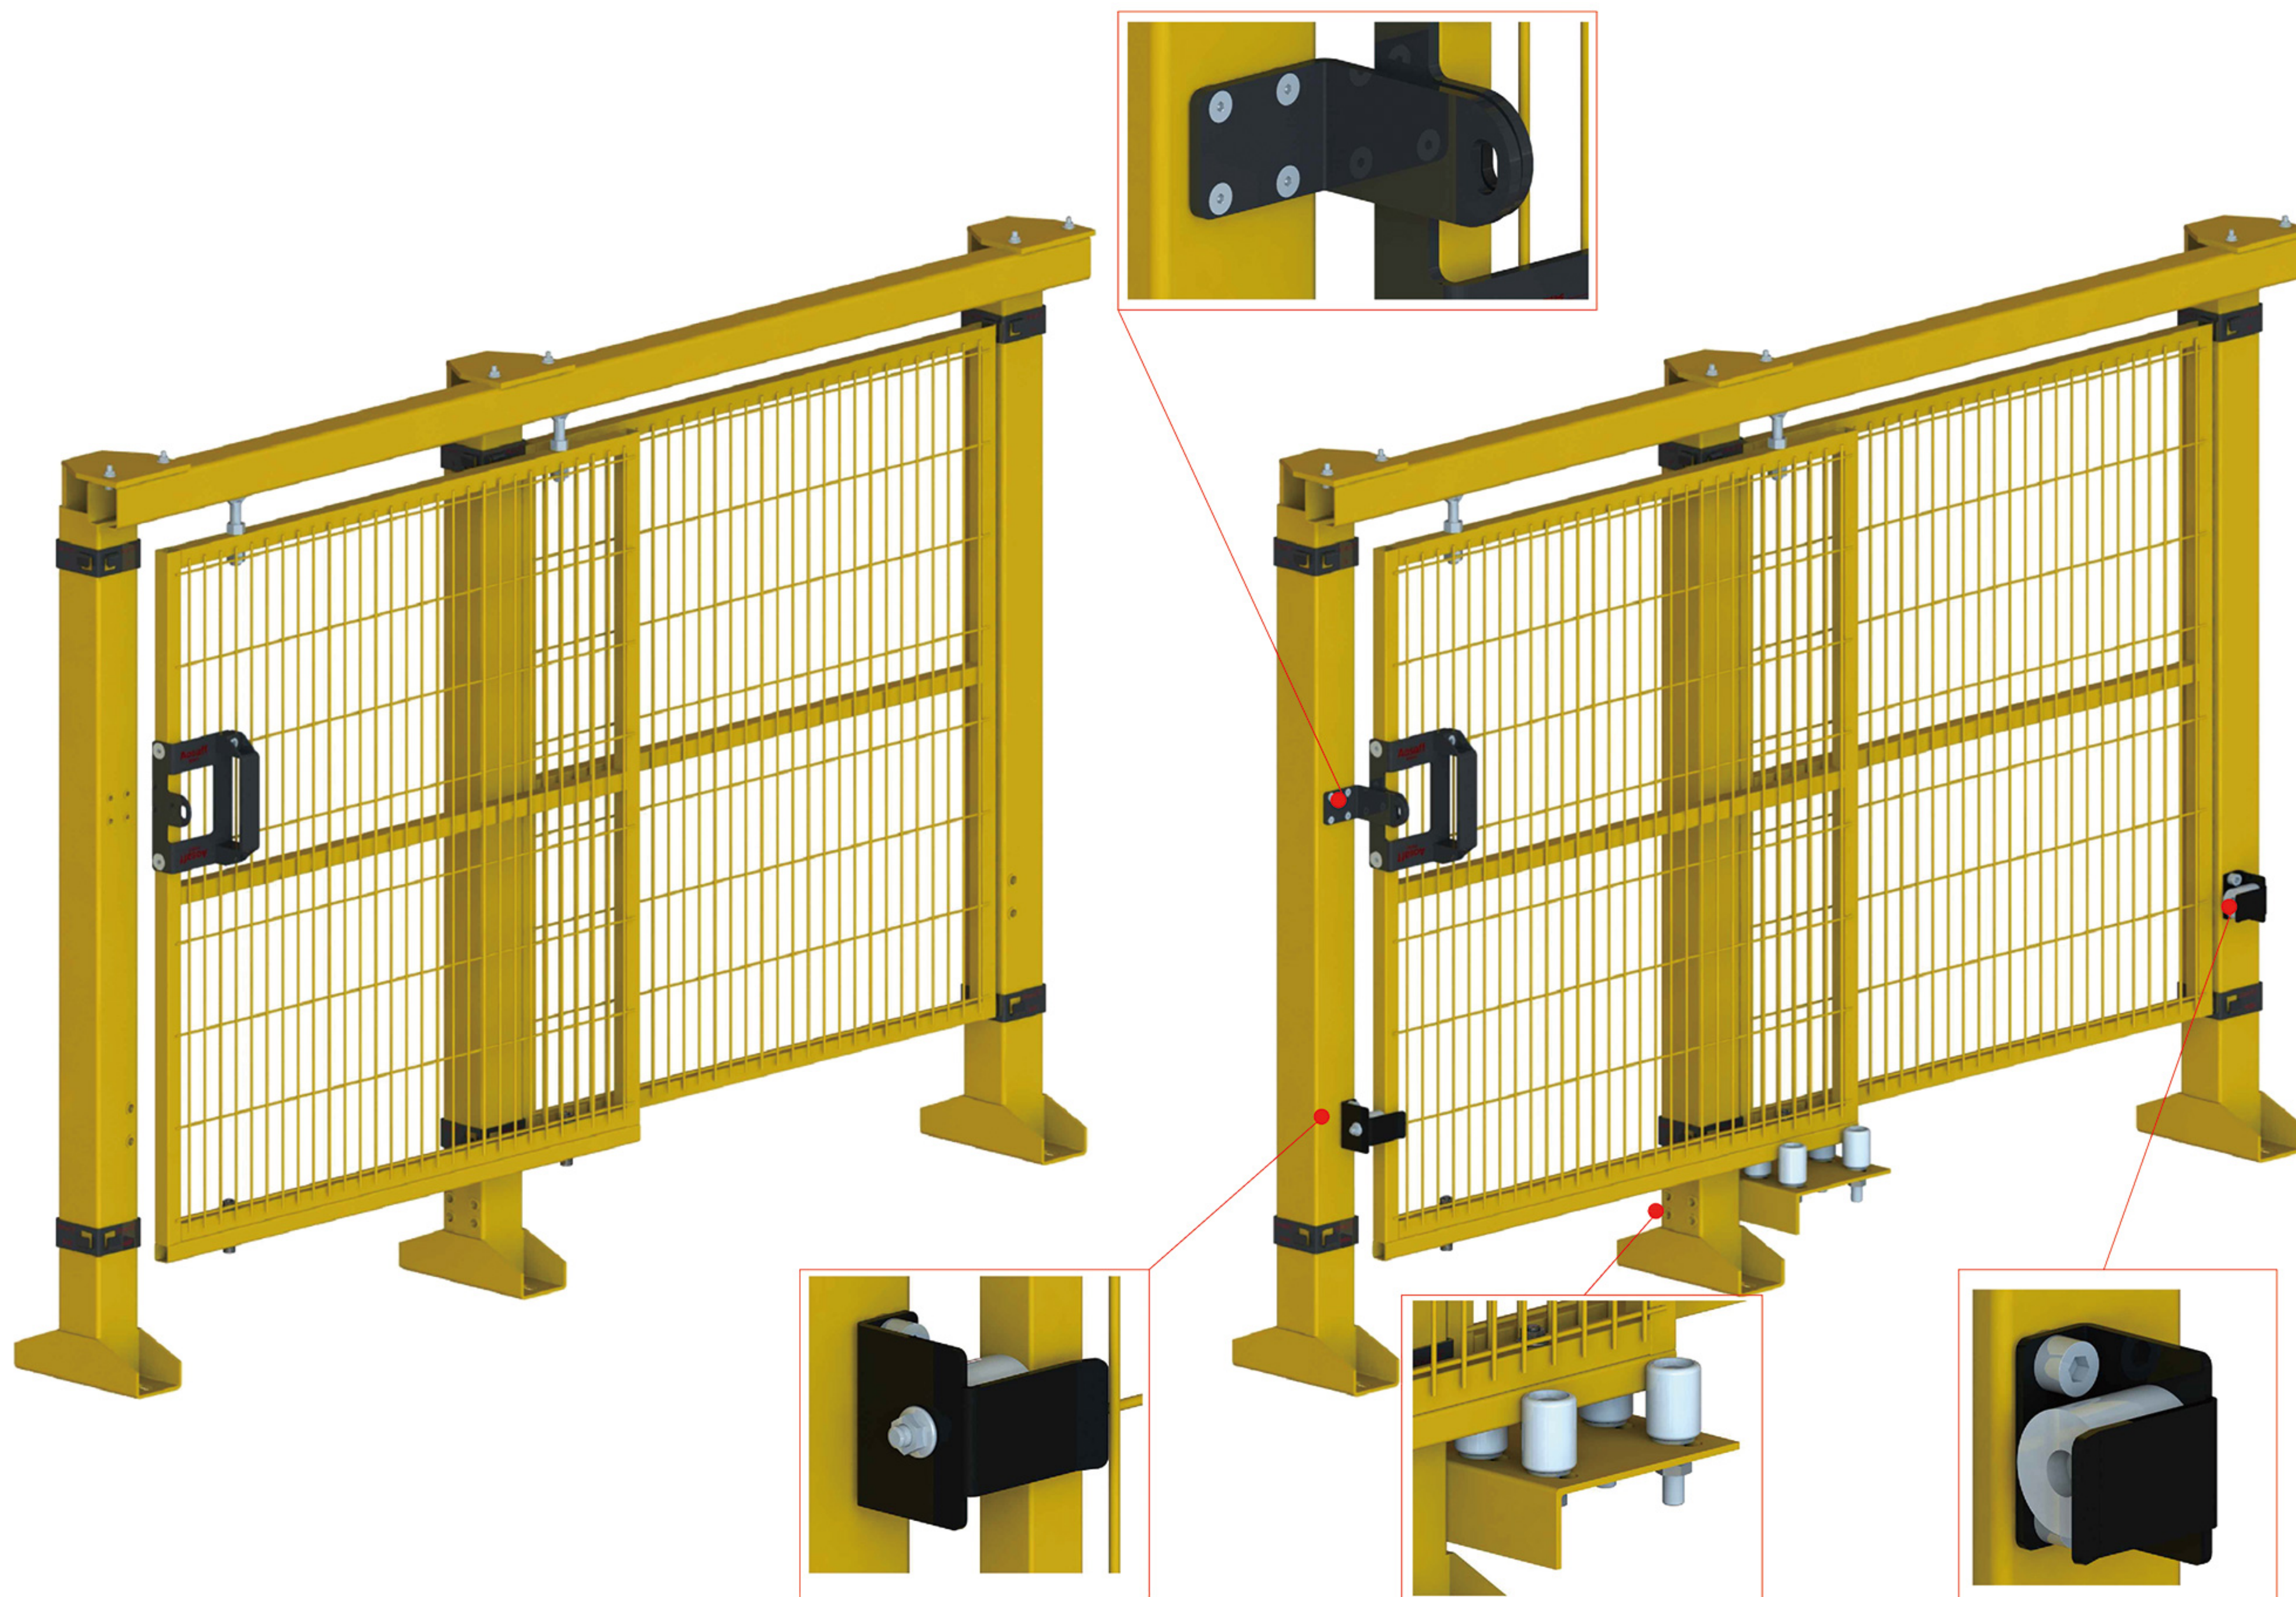

⑥

⑦



8



9



济南奥图自动化股份有限公司
JINAN AOTTO AUTOMATION CO.,LTD.

地 址: 济南市经济开发区华德路355号

电 话: 0531- 86521778 / 86521788

传 真: 0531- 86521797

邮 箱: aosaff@aotto.cn

官 网: www.aotto.cn

产品站: www.e-aotto.com

售后服务热线: 400- 618- 6177